

## TOOLS YOU'LL NEED

- Power drill
- 2.5mm drill bit
- P2 Phillips driver
- Spirit level
- Tape measure
- Pencil
- Step ladder
- Expander foam (supplied)
- Fur strip (supplied)

## CHOOSE YOUR FIT

### INSIDE MOUNT



Blind sits **inside** the window opening.

### OUTSIDE MOUNT



Blind mounts on the **face** of the opening.

Expander foam seals gaps and blocks light. Follow the foam placement shown for your chosen fit — the two are different.

## WHAT'S IN THE BOX



Pelmet



Channel covers



 
Pelmet front cover



Screws




Side rails (L & R)



Expander foam




 Bottom U channel




Fur strip

### 1 UNPACK

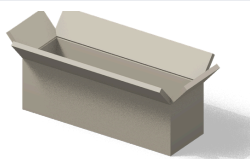

Unpack the blind and all components. Remove the pelmet front cover and set it aside.

### 2 REMOVE FABRIC

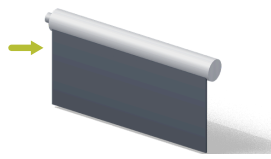


Retract the idler pin and lift the fabric roll out of the pelmet.

### 3 REMOVE FILM



Peel the protective film off the pelmet.

### 4 FOAM — PELMET TOP

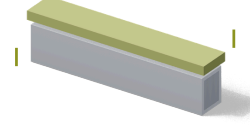


Apply foam over the mounting holes — on **top** for inside mount, on the **rear** for outside mount.

Overhang the foam 3–5mm at each end


INSIDE OUTSIDE

### ! CORNERS — IMPORTANT

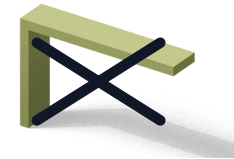

Do **not** run one continuous piece of foam around the corners. Use separate pieces that meet at each corner.

### 6 PELMET ENDS

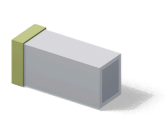


Apply foam to both ends of the pelmet — on the outer end face, in line with the foam on top.

Overhang the bottom 3–5mm


INSIDE MOUNT ONLY

### 7 SIDE RAILS — FOAM

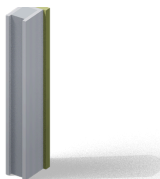

Remove the side rail front covers. Apply foam over the screw holes, overlapping slightly at the base so it lines up with the pelmet foam.


### 8 SIDE RAIL FEET

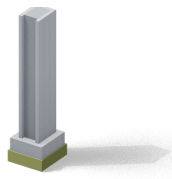

Apply foam to the foot of both side rails — underneath for inside mount, to the back for outside mount.

Overhang the foot 3–5mm

### 9 U CHANNEL — INSIDE

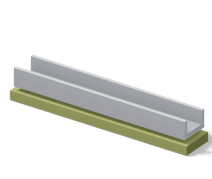


Apply foam to the outside base, covering the mounting holes.

Foam is cut to the exact length

INSIDE MOUNT ONLY

### 10 U CHANNEL — OUTSIDE

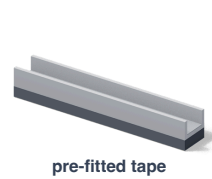


pre-fitted tape

Comes with pre-fitted double-sided tape for light block and fixing. No foam required.


OUTSIDE MOUNT ONLY

### 11 FIT THE PELMET

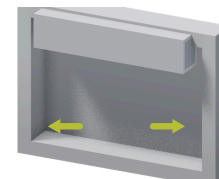


Centre the pelmet and loosely fix it through the pre-drilled mounting holes.

### 12 FIT THE SIDE RAILS

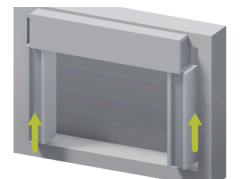


Fit the rails one at a time, up to the end of the pelmet. Leave no gap between the two.

### 13 CHECK & FIX TOP

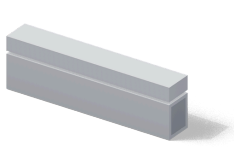


Check the rails are level front to back and left to right, then fix the top mounting hole snugly. Do not over-tighten.

### 14 REMAINING SCREWS

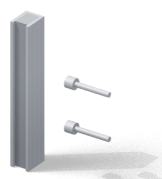

Re-check the rails are still level, then fix the remaining screws.


### 15 FIT THE U CHANNEL

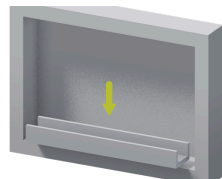

Centre the U channel at the bottom. Inside mount: fix through the pre-drilled holes. Outside mount: use the tape, then adjust the side rail screws slightly to close any gap.


Manual blinds: handle latch faces outwards

### 16 CHECK LEVEL

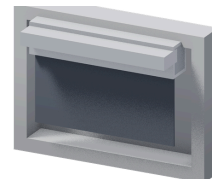

Check the pelmet is level. Adjust fixings if needed, then bring all screws up snug at the same time.


### 17 APPLY FUR STRIP

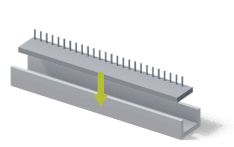

Apply the fur strip to the internal base of the U channel. Start level with the fur in the side rail and run to the same position on the other side.

Sit it as close to the back edge as possible


### 18 REINSERT FABRIC

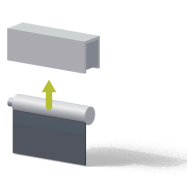

Reinsert the fabric into the pelmet, then wind the idler pin out completely.


Spring blinds: the spring pin stays in until the roll is seated

### 19 FIT CHANNEL COVERS

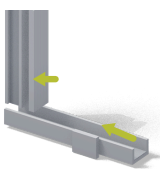

Clip the side rail covers on, checking for a positive click at the bottom. Slide a U channel cover onto each end of the bottom channel to close the gap where it meets the side rail.

### 20 FIT PELMET FRONT

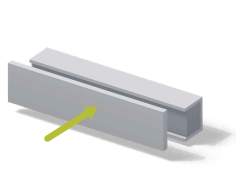

Place the pelmet front on, fix with screws, then remove the protective film.

### 21 FINAL CHECK



Run the blind through its full travel. Spring blinds are pre-tensioned at manufacture — if adjustment is needed, see the detailed install guide. Motorised blinds: set limits per the motor instructions.

## MOTORISED & SPRING

### MOTORISED

Charging point faces forward. Pair the remote at this point, before the pelmet front goes on.

### MANUAL SPRING

Do not remove the spring pin until the fabric roll is back in the pelmet (step 18). Releasing it early lets the spring unwind. Pin faces forward.

## COMMON MISTAKES

- Running one long piece of foam around the corners.
- Not levelling the side rails before fixing.
- Over-tightening the screws.
- Forgetting to check the pelmet is level.
- Skipping the fur strip — it is essential for true light block.

## FINAL CHECKLIST

- ✓ Pelmet level and secure
- ✓ Side rails level and secure
- ✓ U channel fitted and level
- ✓ Fur strip installed
- ✓ Fabric operating correctly through full travel
- ✓ Covers and pelmet front installed
- ✓ All protective film removed

## Need a hand?

Any issue or question, call the team and we'll walk you through it.

1800 482 777

Full step-by-step guides at [coverlight.au/diy/install-guide](https://coverlight.au/diy/install-guide)

## 100% BLOCKOUT

True darkness, any time of day

## MANUAL OR MOTORISED

Choose the operation that suits you

## PREMIUM QUALITY

Built for Australian homes and conditions

## MADE IN AUSTRALIA

Designed and manufactured locally